

TABLE OF CONTENTS -

1	Warning	03
2	Accessories List	04
3	Steps To Install Stand Bracket	0
4	Panel Mounting	09
5	Finished Diagram Picture	10
6	Vertical Installation Method	11
7	Warranty	11




1 WARNING

Severe personal injury and property damage can result from improper installation or assembly. Read the following warnings carefully before beginning.

- 1) If you do not understand the instructions or hardware is damaged or missing, please contact customer service for assistance hello@boncharge.com
- 2) The maximum weight is 21.6lbs/9.8kg.
- 3) This product contains moving parts, please use with caution.
- 4) Do not use this product for anything other than the original design.
- 5) The manufacturer disclaims any liability for the modifications, improper installation, or installation over the specified weight range. The manufacturer will not be liable for any damages arising out of the use of, or inability to use the product.
- 6) Serious injury may occur if young children climb on the stand and/or light fixture. Toys or other items placed on the light fixture may encourage a child to climb on the light fixture and as a result the light fixture may fall over.
- 7) Relocating light fixture equipment to the stand not specifically designed to support it may result in it collapsing or falling over.
- 8) Use with products heavier than the maximum weights indicated may result in instability causing possible injury.


All images are for reference to successfully assemble the product.

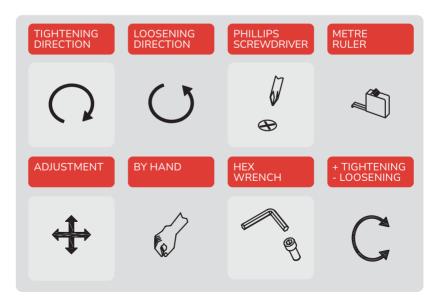


PICTURE	ITEM	QTY
0	A (M8*65mm)	8
9	B (M8*16mm)	5
	C (M8*15mm)	9
	D (M8*130mm)	1
	E	1
	F	1
•	G	1
9	Н	1
g so g	ı	1
0	J	1
	К	2
	L	4
	М	1

Step 1:

Insert the left and right base tubes (E and F) into the connecting pipe (I) and fix them with screws (A);

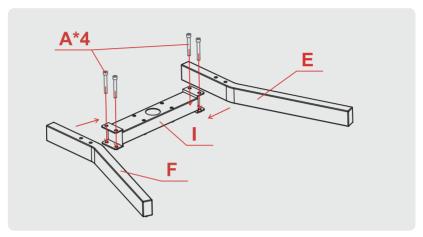


Turn over the base and screw in the four wheels (L).

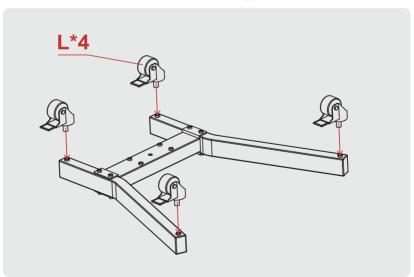

Step 2:

Insert the support rod (G) into the base and screw it with long screws (A), and fasten the whole stand with screw (B) from the bottom upward.

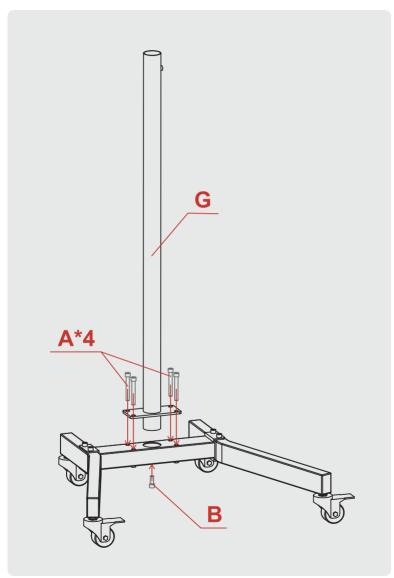


Step 3:

Insert the lift rod (H) into the support rod (G) after assembling the plastic ring (M) into (H), and choose an appropriate height;

You can refer to the first observation hole to locate bracket position, and then use the handle screw (C) to fasten the lift rod at the second hole;

After that, lock and insert another handle screw (C) from the side of the rod to reinforce the structure.

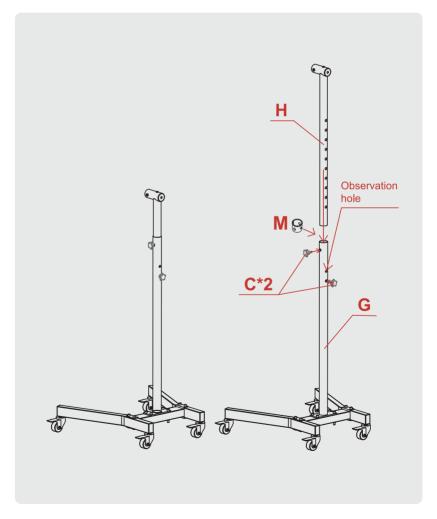

Step 4:


Insert the rotating rod (J) into the lifting rod and fix it with the handle screw (C) on the side;

Screw the structure at the top and back of the rotating rod.

Note: Be careful to place the row of holes of the rotating rod upwards.


If you want to install the stand vertically, just rotate the rod 90° as shown in figure (1).

Once assembled it will resemble figure (2).

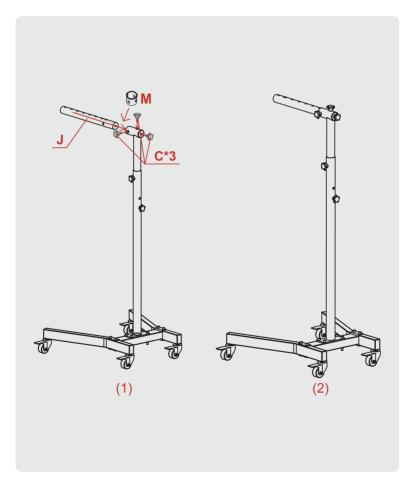

Step 1:

Install both of hooks (K) on to the back of panel and fasten them in place with screws (B).

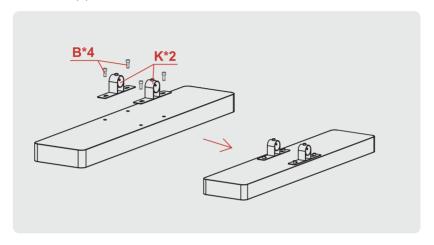



Step 2:

Place the panel onto the stand by sliding both of the hooks on the back of the panel through the top pole.

Make sure the top holes are aligned with the holes on the top of the hook brackets on the back of the panel, lock in place with the handle screws (C);

Ensure that the panel is level and lock side with the handle screws (C) to guarantee balance.

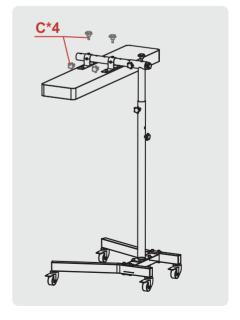

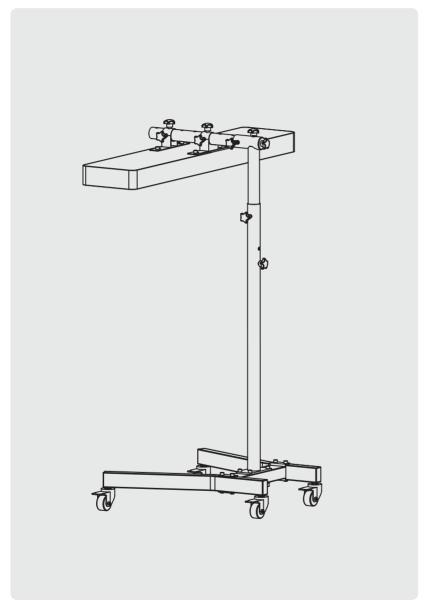


Step 1:

Remove the two screws on the side and the top of the rotating rod near the vertical pole.

Rotate the panel 90°, and put the screws back in place the side and the top of rotating rod as shown in figure (3).

Competed vertical installation will look like figure (4).

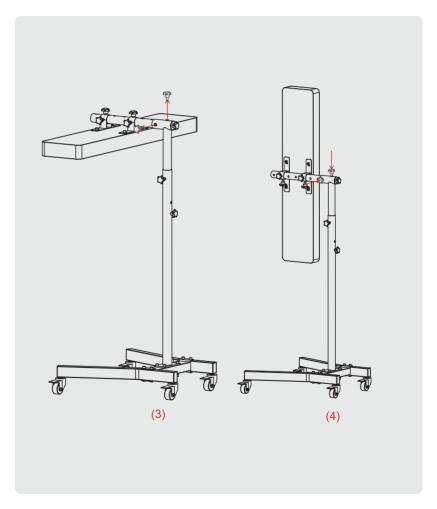

7 WARRANTY

Our device and accessory come with a limited one year warranty.

Our warranty covers any defects in material or workmanship under normal use during the applicable warranty period. During the warranty period, we will repair or replace, at no charge, products or parts of products that prove defective due to improper material or workmanship, under normal use and maintenance.

If the product cannot be repaired or replaced, during the warranty period, we will exchange the defective product for a refund of the purchase price.

The warranty does not cover any problem that is caused by damage resulting from negligence, improper maintenance, modification, unauthorized repair, storage, and transportation. Our warranty does not cover theft or loss of the product.

Any attempt to disassemble or repair our products creates a risk of injury and voids the warranty. We are not responsible nor liable for any damage or injury sustained during, or due to, any disassembly, repair, or attempted repair of equipment by anyone other than an authorized technician. All attempts at repair and disassembly by you or any third-party individual will be undertaken at your own risk and we shall have no liability for any injury to the individual(s) or occurring from such attempted repairs.



- @boncharge
- @boncharge_
- 8 boncharge.com